
SEIKO

(Revised issue)

Catalog No.

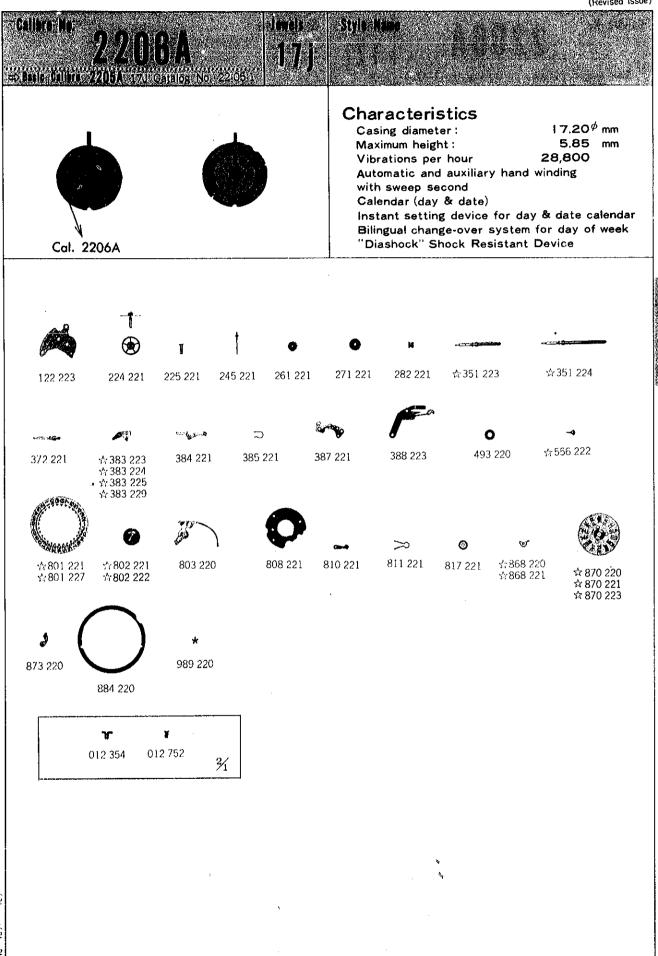

☆⇒Please see remarks on the next page.

As for all other parts not shown here, please refer to the basic calibre

(Cal. No. 2205Å 17J Catalog No. 22.05-1 Red page).

Calibre No.	220CA Jewels	Style Name	
	2206A 17j		
⇔ Basic Calibr	2205A 17J Catalog No. 22-05-1		
PART NO.	LIST OF MATERIALS	PART NO.	LIST OF MATERIALS
PART NO. 112 224 122 223 161 221 171 221 ☆ 193 220 201 220 224 221 225 221 231 220 241 220 245 221 251 220 261 221 271 221 282 221 283 221 284 220 285 220 301 110 310 221 315 220 331 110 341 220 345 220 ☆ 351 223 ☆ 351 224 372 221 373 250 381 220 ☆ 383 224 ☆ 383 224 ☆ 383 224	1	☆ 801 221 ☆ 801 227 ☆ 802 221 ☆ 802 222 803 220 808 221 810 221 811 221 817 221 ☆ 868 220 ☆ 870 223 ※ 870 223 	Date driving wheel Setting wheel lever complete Date dial guard Date jumper Date jumper spring Intermediate date wheel Day finger Day star with dial disk Day jumper Holding ring for dial Intermediate wheel for day correction Stud screw Friction spring screw for sweep second pinion Friction spring screw for intermediate pinion Pallet cock screw Balance cock screw Framework screw for automatic device with ball-bearing Barrel & train-wheel bridge screw Center wheel bridge screw Screw for setting wheel lever complete Case screw Screw for oscillating weight Click screw Dial screw Setting lever spring screw Screw for 1st reduction wheel click guard
★ 383 229 384 221 385 221 387 221 388 223 390 221 ★ 396 221 481 220 491 180 493 220 768 220 014 603 014 605 011 221 014 317 500 221 511 220 530 220 ★ 542 221 546 220 553 220 860 220 ★ 556 221 ★ 556 222	I Data todar	012 750 012 752 011 521 011 542 011 542 011 541 011 528 011 528 011 713 011 505 013 014 013 015 013 016 013 022 013 023	Date dial guard screw Minute wheel bridge screw Upper hole jewel for center wheel Lower hole jewel for center wheel Upper hole jewel for 3rd wheel Lower hole jewel for 4th wheel Upper hole jewel for escape wheel Lower hole jewel for escape wheel Lower hole jewel for sweep sccond pinion Upper hole jewel for pallet Lower hole jewel for pallet Tube for barrel & train-wheel bridge screw Tube for center wheel bridge screw (long) Tube for screw of setting wheel lever complete Tube for setting lever spring screw

☆⇔ Please see remarks on the next page.

Items in light letters are not shown in photos; those parts are interchangeable with the basic calibre

(Cal. No. 2205A 17J Catalog No. 22-05-1 Red page).

Calibre No.

2206A

Jewels

Style Name

⇔ Basic Calibre 2205A 17J Catalog No. 22-05-1

17,

Remarks:

Framework for automatic device with ball-bearing

↑ 193 220 ······ Some movements use the separate parts — Framework for automatic device (Part No. 191 220), Ball-bearing complete (Part No. 821 220) and Screw for ball-bearing complete (Part No. 012 751) — set up as unit.

But the above parts can also be replaced by our more convenient part (Part No. 193 220) which unites the above three parts as single unit serving the purpose of the previous three separable parts.

☆ 351 223

☆ 351 224

Click spring

*382 220 382 110 click spring also acceptable.

(Fig. 1)

Setting lever

There are four types of setting levers. They are used according to the structure of cases and types of winding stems. Select a suitable one by the following procedures referring to the shapes indicated in Fig. 1.

In case of a one-piece water-resistant case, if an incorrect setting lever for dial diameter is used, the winding stem cannot be pulled out or the movement cannot be set in the case.

Attention must be paid to this point. (Refer to Fig. 2, Example of suitable setting lever)

 
☆ 383 223····· Used for watch with joint stem, or with ordinary winding stem other than one-piece or square type water-resistant case.

★ 383 224····· Used for one-piece water-resistant case with ordinary winding stem and dial of diameter 17.50 ~ 18.00 \(\psi mm.

\$\psi 383 225 \cdots \text{Used for one-piece water-resistant case with ordinary winding stem and dial of diameter 18.50 \sim 19.00 \rho mm.


 \pm 383 229····· Used for one-piece water-resistant case with ordinary winding stem and dial of diameter less than 17.00 ϕ mm.

When parts number of the setting lever is unknown or when ordering setting levers other than the above, specify ① Cal. No. ② jewels ③ dial No. and ④ case No.



☆383 223 ☆383 224 ☆383 225 ☆383 229

(Fig. 2)

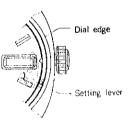

(Example of suitable setting lever) Tail of the setting lever is located between the dial and the case.

Friction spring for sweep second pinion

\$396 221..... 396 110 friction spring for sweep second pinion also acceptable.

Rocking seat for idle wheel (with wheels)

\$\forall 542 221 \cdots \text{Rocking seat for idle wheel (Part No. 542 220) and Idle wheels (2 pcs., Part No. 508 220) are set jointly or sometimes set separately.

 \pm 542 221 set in joint with Rocking seat and Idle wheels, can be used in common with the above two types when replacing (Refer to the right diagram).





⇒ 542 221 (542 220)

-continued on reverse page -

Calibre No.

2206A

Jewels

Style Name

⇒ Basic Calibre 2205A 17J Catalog No. 22-05-1

17

Remarks: —continued —

Date dial

\$801 221..... Used when both the crown and the date frame are located at 3 o'clock position.

☆ 801 227 ····· Used when the crown is located at 3 o'clock position and the date frame at 6 o'clock position.

If the date dial is required in any other type, specify ① Cal. No. ② jewels ③ the crown position ④ the date frame position and ⑤ dial No.

Day star with dial disk

★ 870 220(English ←→ Japanese) · · · · · Used when both the crown and the day frame are located at 3 o'clock position.

☆ 870 221(English) ··········Used when the crown is located at 3 o'clock position and the day frame

★ 870 223(English ← Japanese) · · · · · Used when the crown is located at 3 o'clock position and the day frame at 6 o'clock position.

If the day star with dial disk is required in any other type, specify the number printed on the disk.

Date finger, Date driving wheel and Day finger

Since these parts have two types each, use with the following combination. The parts No. differ according to the shape of the date driving wheel axle pivoting on the main plate. Select a suitable one by referring to the description below when replacing.

☆ 802 221 (Date driving wheel = silver colour)

☆ 868 220(Day finger =silver colour)

 ± 556 222(Date finger = gold colour)

Used only when the date driving wheel axle pivoting on the main plate is without eccentric post.

Used only when the date driving wheel axlo pivoting on the main plate is with eccentric post.

Refer to the following diagram as to distinguish and combine each parts.

Main plate	(Date driving wheel axle)	Date driving wheel	Day finger	Date finger	
		Sammer Ses			
	without eccentric post	☆ 802 221 (silver colour)	☆ 868 220 (silver colour)	か 556 221 (silver colour)	
		The state of the s	20-0	(S)	
	with eccentric post	화 802 222 (gold colour)	☆ 868 221 (gold colour)	∜ 556 222 (gold colour)	

(1) Specifications

Casing diameter Height

17.20 mm 5.85 mm 28,800

Automatic winding

Vibrations per hour

(8 beats per second) (with auxiliary hand winding mechanism)

Idle wheel system Calendar

Day & date, Bilingual changeover mechanism for day indication

With instant day and date setting mechanism (crown revolving system)

(2) Features

A new model with the week days plus the instant day and date setting mechanism added to the existing Calibre 2205. The numbers of parts are reduced, adequately considering easy disassembling and assembling operations and stabilized functions. Regarding the automatic winding mechanism, it adopts an idle wheel system, rendering the mechanism excellent in abrasion resistant and shock resistant characteristics; the winding ability is also stabilized. Since the automatic winding mechanism can be separated from other mechanisms, an independent assembly of the automatic winding mechanism is possible, enabling this mechanism alone to be installed on the movement main body. On the other hand, by adopting an unusual simple clutch mechanism, hand winding of the mainspring is smoothly achieved.

(3) Disassembly and assembly

Refer to calibre 2202A for the train wheel and regulator mechanism; refer to calibre 2205A for the automatic winding mechanism. As for the calendar setting mechanism, disassemble it according to Figs. (1) - (33). Assemble in reverse order to the above procedures, Figs. (33) - (1), paying attention to the comments on the diagrams.

(4) Lubrication

The following colored symbols in the illustrated figures indicate the types of oil, quantities to be applied and lubricating points. (Always comply with indications in the figures for lubrication).

Types of oil

Oil quantity

Moebius A

Sufficient quantity

Seiko watch oil S-4 Normal quantity

Extremely small quantity

Other points requiring lubrication, in addition to the above symbols are separately indicated. Apply oil correctly.

Note: Unindicated portions do not require lubrication.






Movement

2206A CALENDAR, SETTING MECHANISM

- to be continued

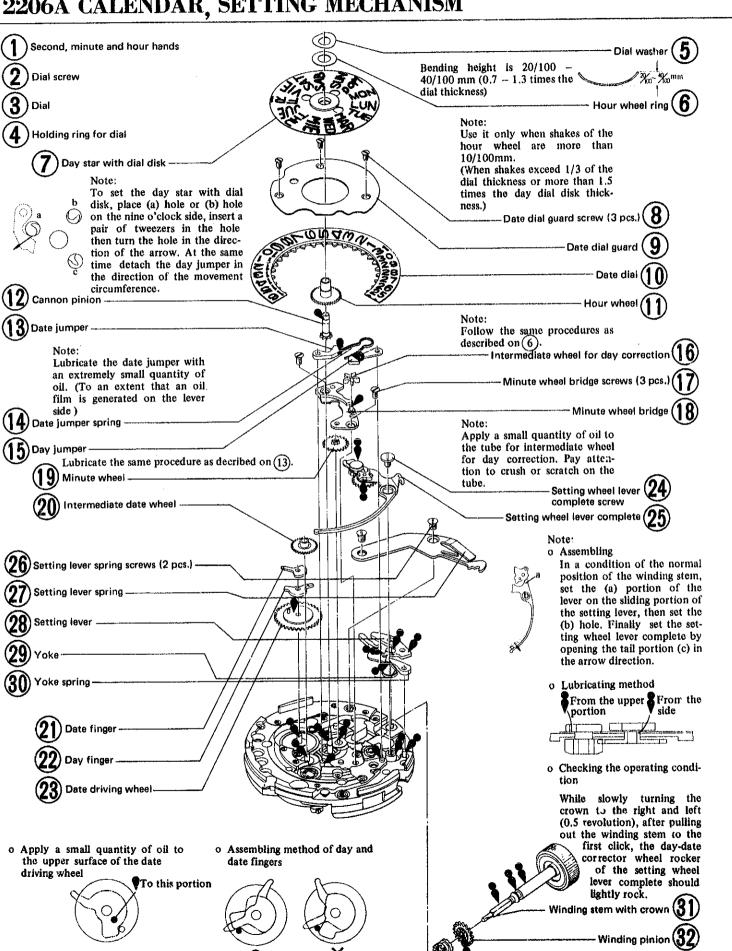

-- 2206A • 2 --

Clutch wheel

2206A CALENDAR, SETTING MECHANISM-Continued

o Shapes of the day and date fingers and date driving wheel have been modified. In replacing them during repair, select the correct parts according to the following combination and dividing method.

*556221 (Date finger = Silver colour)

*802221 (Date driving wheel = Silver colour)
*868220 (Day finger = Silver colour)

*556222 (Date finger = Gold colour)
*802222 (Date driving wheel = Gold colour)
*868221 (Day finger = Gold colour)

Use only when the tube for date driving wheel screw pivoting on the main plate without eccentric

Use only when the tube for date driving wheel screw pivoting on the main plate with eccentric

(Tube for date Main plate driving wheel screw)		Date driving wheel	Day finger	Date finger	
	Without eccentric post	(Silver colour)		0	
	With	STATE OF THE PARTY	200	(o)	


2206A SETTING MECHANISM

Crown normal position (winding the mainspring) – Fig. 8

The mainspring can be wound by revolving the crown when the winding pinion gears with the clutch wheel.


Position where the crown is pulled out to the first click (Setting day and date) - Fig. 9

When the clutch wheel and the setting wheel are geared, turn the crown clockwise and the date dial is forwarded. Turn the crown counterclockwise, then the day star can be quickly forwarded.

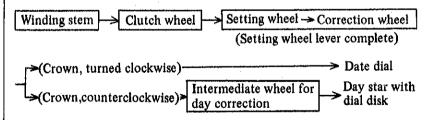

Position where the crown is pulled out to the second click (Setting time) - Fig. 10

As the setting wheel lever complete is pushed by the setting lever, the clutch wheel, the setting wheel and the minute wheel are meshed with one another, and at this position, turn the crown to set the hands.

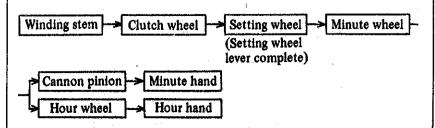

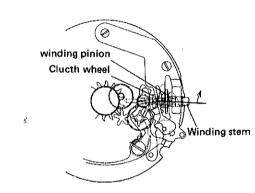
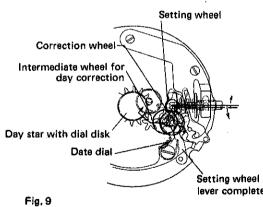


Fig. 8



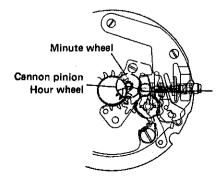


Fig. 10

-2206A·3-

Setting wheel on wheel for correction lial disk Date dial Setting wheel lever complete		4		
dinute wheel pinion wheel	·			