# LASSALE


Cal. 2F50A

# PARTS CATALOGUE

## Cal. 2F50A





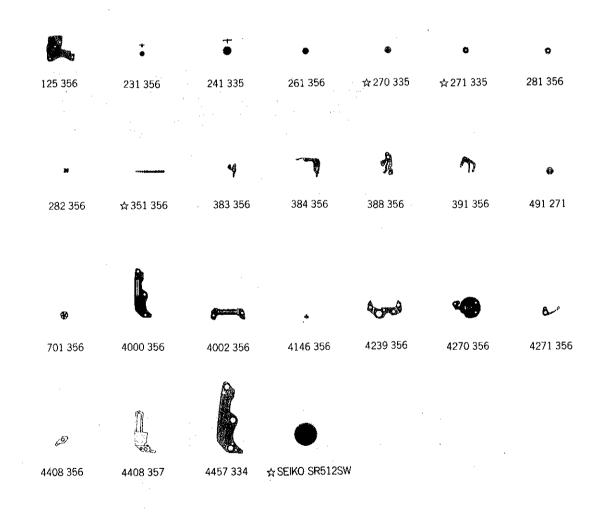

012 056 012 830 012 831 032 026 032 027 032 028 2/1

## Cal. 2F50A

#### Characteristics

Casing diameter:

15.1 mm

Maximum height:

1.3 mm

Jewels :

12 j

Frequency of quartz crystal oscillator: 32,768 Hz (Hz=Hertz..... Cycles per second)

Driving system : Step Motor (2 poles)

Regulation system : Chip condenser

Train wheel setting

PART NO.	PART NO. PART NAME		. PART NAME		
125 356 231 356 241 335 261 356 ☆270 334 ☆270 335 ☆270 336	Train wheel bridge Third wheel & pinion Fourth wheel & pinion Minute wheel Center minute wheel	012 830 012 830 012 831 032 026 032 027 032 028 ☆ SEIKO SRS12SW	Circuit block screw Setting lever spring screw Dial screw Tube for train wheel bridge Tube for coil block Tube for circuit block Silver (II) oxide battery		
☆270 337 ☆271 334 ☆271 335 ☆271 336 ☆271 337 281 356	Hour wheel Setting wheel	☆ Maxell SR512SW	Siver (II) oxide battery		
282 356 ☆351 356 ☆351 357 ☆351 358 ☆351 359 ☆351 360 383 356	Clutch wheel Winding stem (7.7 mm) Winding stem (10.0 mm) Winding stem (12.4 mm) Winding stem with gasket (7.0 mm) Winding stem (15.4 mm) Setting lever				
384 356 388 356 391 356 491 271 701 356 4000 356	Yoke Setting lever spring Train wheel setting lever Dial washer Fifth wheel & pinion Circuit block				
4002 356 4146 356 4239 356 4270 356 4271 356 4408 356	Coil block Step rotor Rotor stator Battery connection (—) Battery connection (+) Setting lever spring spacer				
4408 357 4457 334 011 561 011 562 011 562 011 562	Circuit block spacer Circuit block cover Upper hole jewel for center wheel Upper hole jewel for step rotor Lower hole jewel for step rotor Upper hole jewel for third wheel				
011 562 011 562 011 562 011 562 011 562 011 563	Lower hole jewel for third wheel Upper hole jewel for fourth wheel Lower hole jewel for fourth wheel Upper hole jewel for fifth wheel Lower hole jewel for fifth wheel Upper hole jewel for minute wheel				
011 567 011 737 <b>012 056</b>	Lower hole jewel for minute wheel Lower hole jewel for center wheel Train wheel bridge screw				

### Cal. 2F50A

#### Remarks:

#### Center minute wheel, Hour wheel

There are four different types as specified below. Combination :

ZITIDII IULIOIT :	DINALION :					
Туре	Center minute wheel	Hour wheel				
а						
	☆270 334	☆271 334				
ь		<u> </u>				
	<b>☆270 335</b>	☆271 335				
С	A 270 224	÷ 271 336				
	☆270 336	WZ/1 336				
d						
	<b>☆270 337</b>	☆271 337				

#### Winding stem

\$\&351 356
\$\\$351 357
\$\\$351 358
\$\\$351 359
\$\\$351 360

Refer to the photograph on the front page.

If the combination of the winding stem and case is unknown, check the case .....number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose a corresponding winding stem.

# TECHNICAL GUIDE

# LASSALE

**QUARTZ** 

CAL. 2F50A





#### CONTENTS


١.	SPECIFICATIONS	1
II.	STRUCTURE OF THE CIRCUIT BLOCK	1
III.	DISASSEMBLING, REASSEMBLING, AND LUBRICATING	2
	1. Hour and minute hands ~ Dial	2
	2. Battery ~ Battery connection (+)	4
	3. Train wheel bridge screw ~ Hour wheel	5
	4. Setting lever spring screw ~ Stem with crown	6
IV.	CHECKING AND ADJUSTMENT	7
	Check output signal	7
	Check hands setting condition	7
	Check battery voltage	7
	Check battery conductivity	7
	Check conductivity of circuit block	7
	Check coil block	7
	Check gear train mechanism	8
	Check reset and train wheel setting condition	8
	Check current consumption	9
	Check accuracy	9
	Check appearance and functioning	9
	• Oneon appearance and renotioning	•

		.1)

#### I. SPECIFICATIONS

Cal. No.		2F50A		
Item				
Time indication		2 hands (Moves at every 20 seconds)		
Driving system		Step motor (Fixed-width pulse system)		
Additional mechanism		Electronic circuit reset switch     Train wheel setting device		
Loss/gain		Monthly rate at normal temperature range: less than 15 seconds		
Movement	Outside diameter	15.5 mm between 6 o'clock and 12 o'clock sides 9.5 mm between 3 o'clock and 9 o'clock sides		
size	Casing diameter	φ15.1 mm		
	Height	1.3 mm		
Regulation system		-		
Measuring gate by quartz tester		Use the 10-second gate		
Battery		Miniature battery, SEIKO (SEIZAIKEN) SR512SW, Maxell SR512SW Battery life is approximately 2 years. Voltage: 1.55V		
Jewels		12 jewels		

#### II. STRUCTURE OF THE CIRCUIT BLOCK

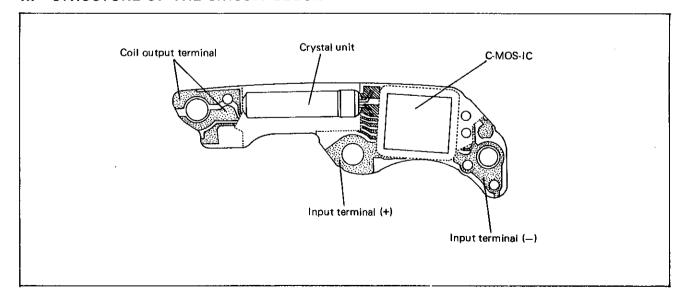

#### III. DISASSEMBLING, REASSEMBLING, AND LUBRICATING

#### List of the screws used

Shape	Part No.	Name	Shape	Part No.	Name
	012 930 (3	Circuit block screw (3 pcs.)		012 056	Train wheel bridge screw (2 pcs.)
		Setting lever spring screw (1 pc.)		012 831	Dial screw (1 pc.)

Disassembling procedures Figs. : (1) → (30)

Reassembling procedures Figs. : (30) → (1)

Lubricating

Types of oil:

Moebius A


Oil quantity:

Normal quantity

Extremely small SEIKO Watch Oil S-6

• Use the movement holder S-681 for disassembling and reassembling.

#### 1. Hour and minute hands $\sim$ Dial

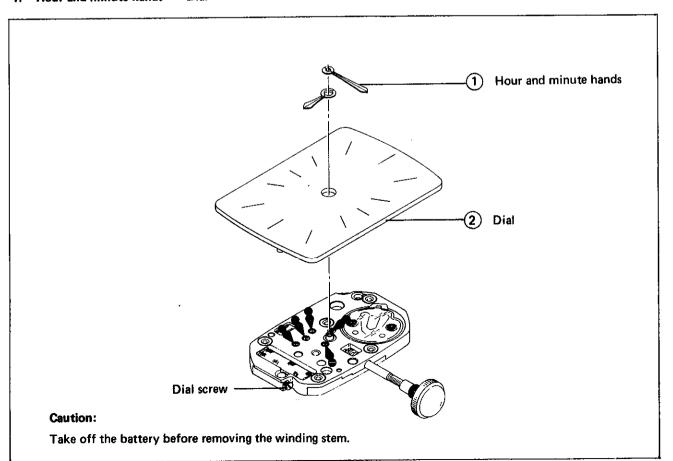

#### Remarks on disassembling and reassembling


(1) Hour and minute hands

#### • How to disassemble the hour and minute hands

As this watch has only a little clearance between the dial and the hands, the bow-type hand remover cannot be used. Disassemble the hands by following the instructions below.

- 1. Prepare a vinyl sheet and make a small hole in the center of it. (Ex.: Use a vinyl bag for spare parts container.)
- 2. Set the vinyl sheet so that the minute hand comes out through the hole of the vinyl sheet.
- 3. Hold the one end of the vinyl sheet with finger and pull the other side up to disassemble the minute hand. When holding the vinyl sheet with finger, be careful not to scratch the dial surface with nail.

Disassemble the hour hand, following the same procedures.

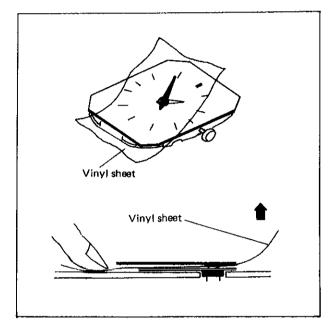

#### • How to reassemble the hour and minute hands

Use the movement holder S-681.

Place a vinyl sheet on the dial so as not to scratch it.


When pushing in the hands, be careful not to apply undue force on the dial and the movement to prevent them from

After having pushed in the hands, their setting condition cannot be adjusted. Be sure to push them in one by one so that they are set horizontally.


(2) Dial

The dial is fixed with the dial screw on the 6 o'clock side, but the dial screw is not used on the 12 o'clock side because it is held with the circuit block spacer.


After setting the dial, check to see if it is correctly set level.

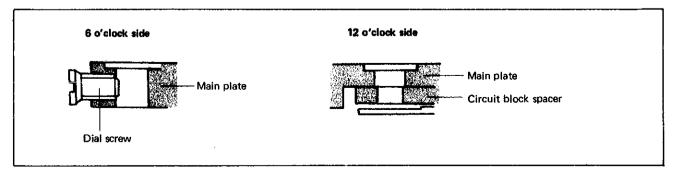


#### 2. Battery ~ Battery connection (+)

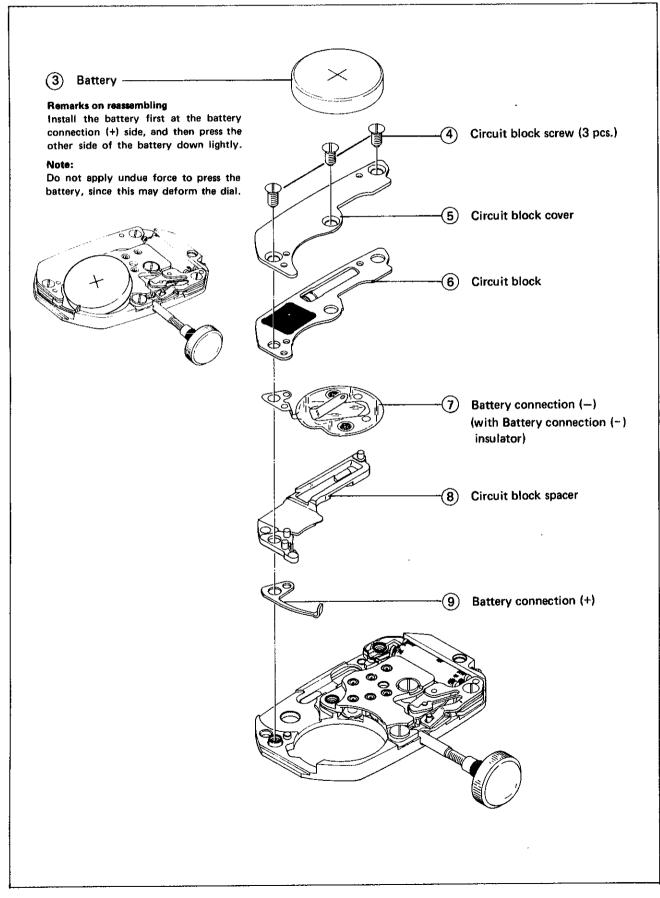

#### 3. Train wheel bridge screw $\sim$ Hour wheel

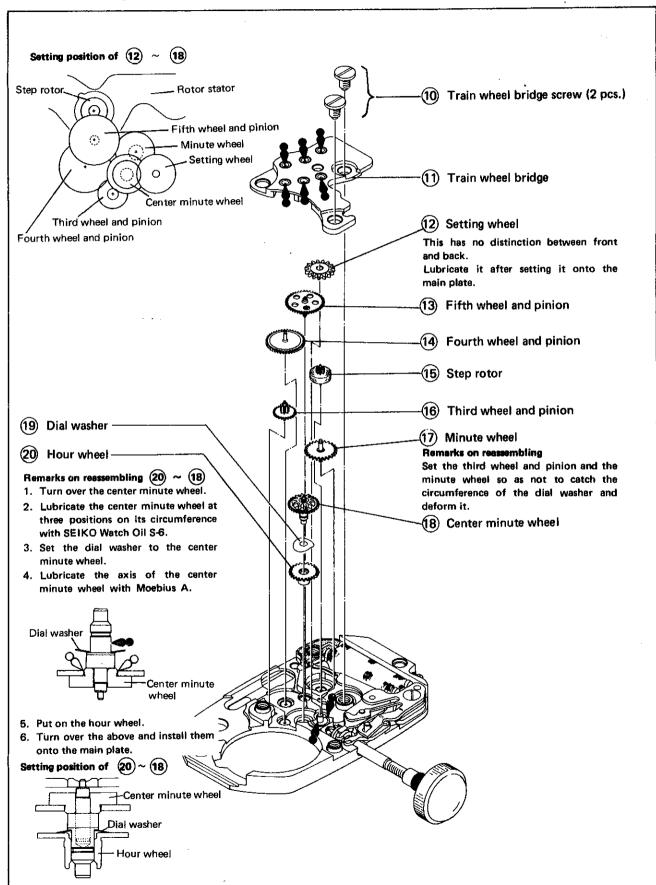

#### 4. Setting lever spring screw ~ Stem with crown

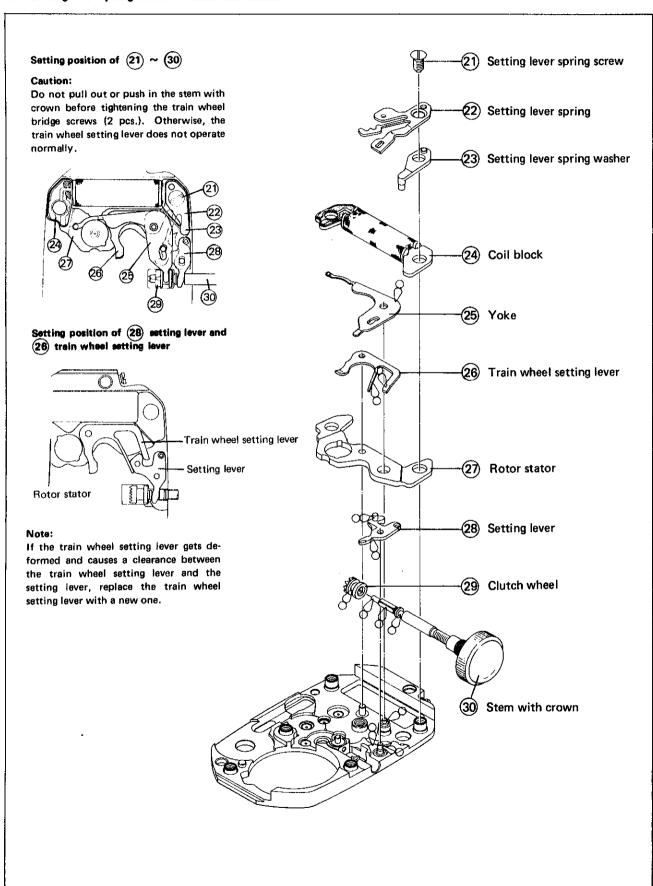

#### IV. CHECKING AND ADJUSTMENT

• The explanation here is only for the particular points of Cal. 2F50A. Refer to the "TECHNICAL GUIDE, GENERAL INSTRUCTION" for SEIKO Analogue Quartz for details.

#### **Procedure CHECK OUTPUT SIGNAL** Use the quartz tester. Range to be used: 10-second gate (The minute hand moves at 20-second intervals, but the pulse is generated every 10 seconds for measuring the daily rate.) Result: Normal: Input indicator blinks every 10 seconds. Defective: Input indicator does not blink every 10 seconds. **CHECK HANDS SETTING CONDITION CHECK BATTERY VOLTAGE** Use the Digital Multi-Tester S-840. Mode to be used: DC V Result: Normal: More than 1.57V Defective: Less than 1.57V • Before starting measurement, short-circuit the probes to see that the Digital Multi-Tester displays "AUTO 00.0mV" or "AUTO 00.1mV", **CHECK BATTERY CONDUCTIVITY** CHECK CONDUCTIVITY OF CIRCUIT BLOCK CHECK COIL BLOCK Use the Digital Multi-Tester S-840. Result: Mode to be used: $\Omega$ Normal : $2.0K\Omega \sim 2.4K\Omega$ -Less than 2.0K $\Omega$ (Short circuit) Defective --- More than 2.4KΩ (Broken wire) Replace the coil block with a new one.

. Before starting measurement, short-circuit the probes to see that the Digital Multi-Tester displays "AUTO

 $00.2 \sim 00.4\Omega''$  with the buzzer beeping.


#### Procedure

#### **CHECK GEAR TRAIN MECHANISM**

#### CHECK RESET AND TRAIN WHEEL SETTING CONDITION

- (1) Check to see if the step rotor stops promptly when the crown is pulled out completely and if it starts exactly 20 seconds after the crown is pushed in back to the normal position.
- (2) Check train wheel setting condition. Check the clearance between the train wheel setting lever and the fifth wheel and pinion by looking through the hole of the train wheel bridge.

#### • With the crown at the normal position

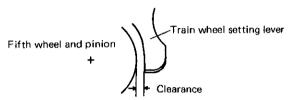

#### Result:


Normal : Clearance

Defective: No clearance

Replace the train wheel setting

lever with a new one.

#### With the crown at the first click position

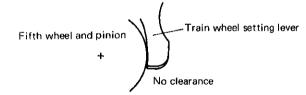

#### Result:

Normal : No clearance

Defective : Clearance

Replace the train wheel setting

lever with a new one.

(3) Check reset condition.

Check output signal of the circuit block with the coil block and battery installed.

#### • With the crown at the normal position

#### Result:

Normal : Input indicator blinks every

second.

Defective: Input indicator does not blink

every second.

Replace the yoke with a new one.

#### • With the crown at the first click position

#### Result:

Normal

: Input indicator does not blink

every second.

Defective: Input indicator blinks every

second.

Replace the yoke with a new one.

#### **Procedure**


#### **CHECK CURRENT CONSUMPTION**

#### Caution:

- Do not check current consumption under an incandescent lamp since strong light may cause a watch to consume excess current.
- Be sure to protect the MOS-IC unit from light with a black paper while measuring.

Use the Digital Multi-Tester S-840.

Mode to be used:  $\mu A$ 

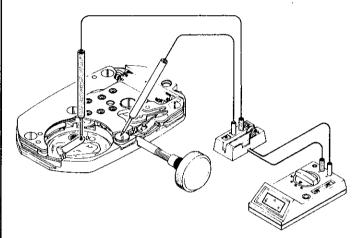

Probe red . . . . . . Circuit block cover Probe black . . . . . . . Battery connection (-)

#### Result:

Normal: Less than 0.3µA Defective: More than 0.3µA

- (1) Set the display stabilizing switch of the tester to the "B" position.
- (2) Apply the (+) and (-) probes of the tester as shown in the illustration above, and the tester displays a value, indicating that electric current is flowing in the IC.
- (3) The value displayed is increased, since the current for driving the step rotor flows once every 20 seconds.
- (4) After approximately one minute, read a maximum value which is displayed stably.

#### CHECK ACCURACY

- Use the 10-second gate of the quartz tester.
  - The minute hand moves at 20-second intervals, but the pulse is generated every 10 seconds for measuring the daily rate.
- If there is time loss/gain, replace the circuit block with a new one.

#### **CHECK APPEARANCE AND FUNCTIONING**