


Calibre No. 5601A ⇨ Basic Calibre 5606A ^{23J} / _{25J} Catalog No. 56-06-1	Jewels 23j	Style Name
--	----------------------	------------

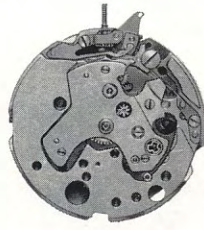

Cal. 5601A

Characteristics

Casing diameter : 25.60 ϕ mm
 Maximum height : 4.25 mm
 Vibrations per hour : 21,600
 Automatic and auxiliary hand winding
 with sweep second
 Second-setting device
 Micro-adjustor
 "Diashock" Shock Resistant Device
 "Diafix" Oil Lubrication Device



387561




388562



808561



509565

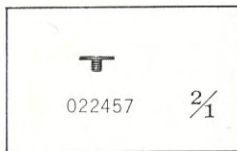

022457

$\frac{3}{4}$

Calibre No.	5601A	Jewels	Style Name
		23j	
⇨ Basic Calibre 5606A ^{23J} / _{25J} Catalog No. 56-06-1			

PART NO.	LIST OF MATERIALS	PART NO.	LIST OF MATERIALS
112560	Barrel & train-wheel bridge	022454	Screw for reverser idler bolt
161560	Pallet cock	022457	Yoke screw (Clutch lever screw)
171560	Balance cock	022458	Screw for oscillating weight
189560	Transmission wheel bridge	022467	Ratchet wheel screw
205560	Complete barrel with arbor	022484	Bridge screw
213560	Barrel arbor	022486	Minute wheel bridge screw
220560	Large driving wheel & pinions	022662	Setting lever spring screw
225560	Cannon pinion	022667	Second-setting lever screw
231560	Third wheel & pinion	022753	Date dial guard screw
241560	Sweep second wheel & pinion	022761	Dial screw
251560	Escape wheel & pinion	011147	Upper hole jewel for large driving wheel & pinions
261560	Minute wheel		
271611	Hour wheel	011147	Lower hole jewel for large driving wheel & pinions
282560	Clutch wheel		
283560	Winding pinion	011323	Lower hole jewel for 3rd wheel
285560	Ratchet wheel	011423	Lower hole jewel for escape wheel
301560	Jewelled pallet fork & staff	011503	Upper hole jewel for pallet
310560	Balance complete with stud	011503	Lower hole jewel for pallet
315560	Balance staff	011147	Lower hole jewel for 1st reverser idler
331560	Roller with jewel	011151	Upper hole jewel for differential wheel
341560	Regulator	011133	Lower hole jewel for differential wheel
345612	Stud holder	011159	Upper hole jewel for transmission wheel
354560	Winding stem	011159	Lower hole jewel for transmission wheel
361560	Second-setting lever spring	023179	Tube for minute wheel bridge screw
367560	Minute wheel spring	023180	Tube for bridge screw (Cylinder type)
381560	Click	023184	Tube for bridge screw (Recessed type)
☆ 383560	Setting lever		
☆ 383561			
☆ 383562			
384560	Yoke (Clutch lever)		
385560	Yoke spring (Clutch lever spring)		
387561	Minute wheel bridge		
388562	Setting lever spring		
390560	Setting lever axle		
391560	Second-setting lever		
401560	Mainspring with slipping attachment		
014363	Diashock upper frame		
014384	Diashock lower frame		
014365	Diashock hole jewel with frame		
011210	Diashock cap jewel		
014317	Diashock spring		
015421	Diafix upper hole jewel with frame for 3rd wheel		
015411	Diafix upper hole jewel with frame for escape wheel		
011206	Diafix cap jewel		
015113	Diafix spring		
509565	Oscillating weight with ball-bearing		
505560	Transmission wheel		
531560	Differential wheel		
848560	First reverser idler		
851560	Second reverser idler		
854560	Reverser idler bolt		
803560	Setting wheel lever complete		
808561	Date dial guard		
812560	Setting wheel lever spring		
☆ 884560	Holding ring for dial		
022150	Stud screw		
022252	Transmission wheel bridge screw		
022257	Yoke spring screw (Clutch lever spring screw)		
022373	Pallet cock screw		

☆ ⇨ Please see remarks on the next page.

Items in light letters are not shown in photos; those parts are interchangeable with the basic calibre

(Cal. No. **5606A** ^{23J}/_{25J} Catalog No. 56-06-1 Green page).

Calibre No.

5601A

Jewels

23 j

Style Name

⇒ Basic Calibre 5606A ^{23J}/_{25J} Catalog No. 56-06-1

Remarks :

Setting lever

There are three types of setting levers, used according to the dial diameter. Select the suitable setting lever by referring to the shapes indicated in the photos and fig. 1.

When a setting lever unsuitable for the dial diameter is used, the winding stem cannot be pulled out or the movement cannot be assembled in the case. Pay attention to this point (refer to fig. 2).

When the dial is round, the number of the setting lever differs (listed below) according to the dial diameter.

- (Dial diameter) 25.5 ~ 26.5 φmm ☆ 383561
- (") 27.5 ~ 28.5 φmm ☆ 383560
- (") 29.5 ~ 30.5 φmm ☆ 383562

If the number of the setting lever is unknown or when placing an order for a setting lever other those mentioned above, specify ① Cal. No. and ② the dial No.

[fig. 1]



☆ 383560




☆ 383561



☆ 383562


[fig. 2]

When the setting lever is too small

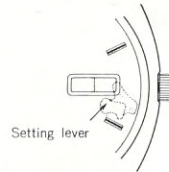


Setting lever is hidden under the dial and the winding stem cannot be pulled out.

When the setting lever is too large

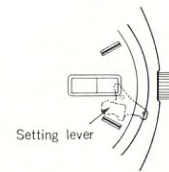

Blocked by the setting lever, the movement cannot be assembled in the case.

— Correct —

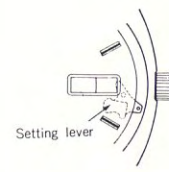

End of the setting lever is located between the dial and the case.

Holding ring for dial ——— Measure the total thickness and the outside diameter ———

☆ 884560 0.53 mm total thickness and 27.0 φmm outside diameter.

If the holding ring for dial is required in any other type, specify ① Cal. No. and ② the dial No.